

Premiere Networks XDS PRO4-P

Software Updates and Reboot Procedures

These features allow you to check your latest firmware and/or allow you to gently shut down or reboot your receiver without causing Hard Drive (HDD) or Flash Drive (CF) file corruption.

To check your receiver code version confirmation:

Push **SET** (twice if back light is off)
Right Arrow to **Setup**
Push **SET**
Left arrow to **Version**
Push **SET**
Read Version and date

To check if your receiver is holding latest code update but still needs to load it:

Push **SET** (twice if back light is off)
To **Status** (or Right arrow to Status)
Press **SET**
If **Active Faults** shows "**SW Download Ready**", this means you have new code that needs loading ASAP.

Usually the **Update** LED is flashing 3X/ Sec in this condition (but other conditions can reset the Update LED status, so performing this check will verify if new code is available).

Once you have confirmed you have software ready to load please proceed with the following procedure:

From **Main Menu** press **Set** (twice if back light is off) or **Up** Arrow from **Status** Menu
Right Arrow to **Setup** - Press **Set**
Left Arrow to **Reboot** - Press **Set**
Press "**1**" (**Yes**) - for Soft Reboot (power remains on, receiver reboots, loads new code)
Press "**2**" (**Unplug**) - for Soft Shutdown (afterwards you completely power cycle the receiver, sometimes this is more effective)
-or-
Press "**3**" (**No**) escape if you are not sure and then contact XDSHELP@iheartmedia.com

To remotely reboot your XDS receiver via the Affiliate webpage (not the IP Address):

Log into myxdsreceiver.premiereradio.com

After logging in, click the "**Set my Password, Time Zone...**" or **Configuration** option at the top of the screen.

Once there, click the **IRD Commands** tab and select **Reboot SDL** from the drop-down menu. Click **Send Command**. At Message from Webpage, click "**OK.**"

Note: If you are not sure of the serial number or password both can be obtained from the front panel by pressing **Set** until you see **Status**, go Right to **Setup** and pressing **Set**. Press "**3**" (**PWD**) to view the daily password.