

Premiere Radio Networks XDS PRO4-P Software Updates and **Reboot Procedures**

These features allow you to check your latest firmware and/or allow you to gently shut down or **REBOOT YOUR RECEIVER** without causing Hard Drive or Flash Drive file corruption.

To check your receiver code version confirmation:

Push "SET" twice (Once to light up the panel display, once to open the Menu)
Right Arrow to Setup
Push "SET"
Left arrow to Version
Push "Set"
Read Version and date

To check if your receiver is holding latest code update but still needs to load it:

Push "SET" twice (Once to light up the panel display, once to open the Menu)
Right Arrow to Status
Press "Set"
"SW download ready" means you have new code that needs loading ASAP.
Usually update LED is flashing 3X/Sec in this condition (but other conditions can reset the Update LED status, so performing this check will verify if new code is available).

Once your have confirmed you have software ready to load - to actually load it:

(REBOOT PROCEDURES):

Press 'Set' (twice if back light is off)
Right Arrow to 'Set Up' - Press 'Set '
Left Arrow to 'Reboot' - Press 'Set '
Press '1' - for Soft Reboot (power remains on, receiver reboots, loads new code)
Press "2" - for Soft Shutdown (afterwards you completely power cycle the receiver, sometimes this is more effective)
-or-
Press "3" escape if you are not sure and then contact XDSHELP@PremiereRadio.com

To REMOTELY REBOOT your XDS receiver:

You need to have the receiver IP address using Telnet on the same network as the XDS PRO4-P (in the notes below "_" is a single space for clarity... do not type an actual underscore) commands:

Telnet_yourIPAddress_2000
login_tech_radio
SF_Show (will reply "SDL Ready" if new code is ready to load or if you've already loaded the latest version it will say OK)
Reboot_SDL
(receiver should reboot, and session will disconnect)